

## Step by Step Installation Guide - WASTE & TRAPS



- ✓ Choose from one of two systems, Push-Fit or Solvent Weld.



- ✓ Ensure you purchase the correct pipe for your chosen system.



- ✓ The two systems can be joined using a universal compression fitting.



### Push-Fit fitting



- ✓ Measure and cut the pipe to size.



- ✓ Lubricate the ring seal in the socket.



- ✓ Push the pipe into the socket.

### Solvent fitting



- ✓ Measure and cut the pipe to size.




- ✓ Apply solvent cement to the outside of the pipe and inside of the socket.
- ✓ Leave for 2 or 3 seconds for the cement to work on the plastic.



- ✓ In one swift movement, push the pipe into the socket.
- ✓ Allow 5 minutes for the solvent to bond before handling.

Continued...

## Step by Step Installation Guide - WASTE & TRAPS

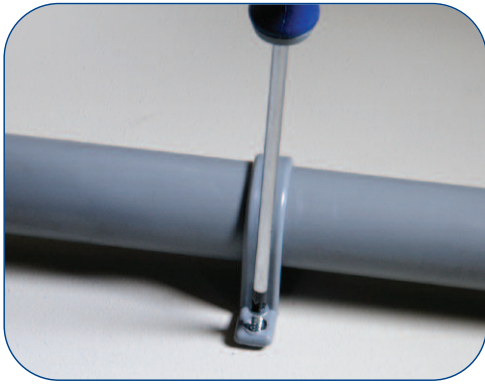

Pipework support (BS EN 12056:2000)		
Maximum distances for support		
	Vertical	Horizontal
32mm	1.2m	0.5m
40mm	1.2m	0.5m
50mm	1.2m	0.6m

✓ All pipes must be supported both vertically and horizontally.

### Traps



✓ FloPlast's wide range of traps fully integrates with its waste systems.

✓ Each trap incorporates a universal compression end to allow the use of both Push-Fit and Solvent systems.



For additional installation advice, please check our website:

[www.floplast.co.uk](http://www.floplast.co.uk)